

Faster repairs • Greater uptime • Lowest total cost of ownership

# **Part Identification & Kit Schematics**

This document will help you identify parts and also provide a visual guide to installation of the various kits Fontaine Parts Connection offers for easy maintenance.



Fontaine Armor™ Repair Kits		
Description	Part #	Page
Stationary Jaw Kit	ARMORSJK	2
Jaw Replacement Kit	ARMORJRK	2
Trigger Assembly Kit	ARMORTAK	3
Lock Assembly Kit	ARMORLAK	4
Knockout Rod Kit	ARMORKRK	5
Spring Kit	ARMORSRK	5
Air Cylinder Kit	ARMORACK	6
Cover Plate Kit	ARMORCPK	6
Pin and Bushing Kit	ARMORPBK	7
Wear Plate Kit	ARMORWPK	8

Item	Description	Quantity	Included in kit	
1	Wear plate	2	ARMORWPK	
2	Knockout rod	1	ARMORKRK	
3	Knockout rod clip	1	ARMORKRK	
4	Knockout rod spring	1	ARMORKRK	
<b>(5</b> )	Knockout rod nut	1	ARMORKRK	
6	Stationary jaw	1	ARMORSJK, ARMORLAK	
7	Locking jaw	1	ARMORJRK, ARMORLAK	
8	Torsion spring	1	ARMORTAK, ARMORLAK, ARMORSRK	
9	Trigger	1	ARMORTAK, ARMORLAK	
10	Secondary lock	1	ARMORTAK, ARMORLAK	
11	Operating handle	1	ARMORTAK, ARMORLAK	
12	Main spring	1	ARMORTAK, ARMORLAK, ARMORSRK	
13	Spring tensioner	1	ARMORTAK, ARMORLAK, ARMORSRK	
14)	Air Cylinder	1	ARMORACK	
15	3-way air valve	1	ARMORACK	
16	Cover plate	1	ARMORTAK, ARMORLAK, ARMORCPK	



- Keep hands away from throat of operating fifth wheel
- Wear Personal Protective Equipment (PPE)
- Make sure the wheel is disarmed before maintenance
- Follow all instructions
- Read operating manual before use
- Use proper procedures
- Use proper tools




For instructional video scan or go to www.fifthwheel.com/maintenance/





Faster repairs • Greater uptime • Lowest total cost of ownership

Stationary Jaw Kit (ARMORSJK) Jaw Replacement Kit (ARMORJRK)

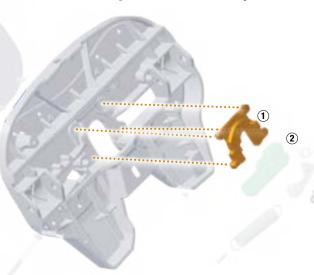

## **Stationary Jaw Kit**

Part # ARMORSJK

Standard Repair Time:

### 1 Hour

	Item	Description	Quantity
	1	Stationary jaw	1
_			,

See video at fifthwheel.com/maintenance/ Choose "Stationary Jaw Replacement"





Tools Required
Crowbar
Pliers
3/4" deep well socket with 2" extension
9/16" socket
11/16" socket
1/4" allen wrench
Kingpin tool

Personal Protective	
Equipment	
Safety glasses	
Work gloves	
Steel toe boots	

## **Jaw Replacement Kit**

Part # ARMORJRK

Standard Repair Time:

### 15 Minutes

		Description	Quantity	<b>Tools Required</b>
	2	Locking jaw	1	Crowbar
		o at fifthwheel.com/maintenance	9/	Pliers
ı			3/4" deep well so	
	a	100		with 2" extension
				44/4011 1 1



 
Kingpin tool	
Personal Protective Equipment	
Safety glasses	
Work gloves	
Steel toe boots	

3/4" deep well socket with 2" extension 11/16" socket



Locking Jaw










Faster repairs • Greater uptime • Lowest total cost of ownership

# Trigger Assembly Kit (ARMORTAK)

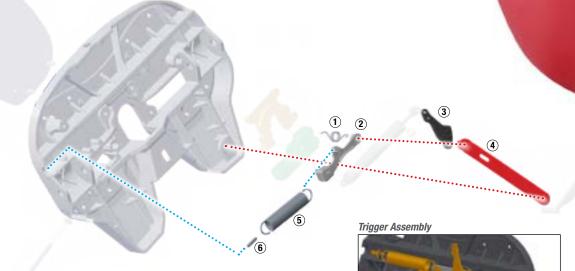

## **Trigger Assembly Kit**

Part # ARMORTAK

Standard Repair Time:

## **45 Minutes**

Item	Description	Quantity
1	Torsion spring All parts	are 1
2	Trigger pre-assen	
3	Secondary lock in trigg	
4	Operating handle assembly	/ kit. 1
5	Main spring	1
6	Spring tensioner	1

See video at fifthwheel.com/maintenance/ Choose "Trigger Assembly Replacement"

Tools Required
Crowbar
Pliers
3/4" deep well socket with 2" extension
9/16" socket
11/16" socket
1/4" allen wrench
Kingpin tool

Personal Protective Equipment
Safety glasses
Work gloves
Steel toe boots








Faster repairs • Greater uptime • Lowest total cost of ownership

# Lock Assembly Kit (ARMORLAK)

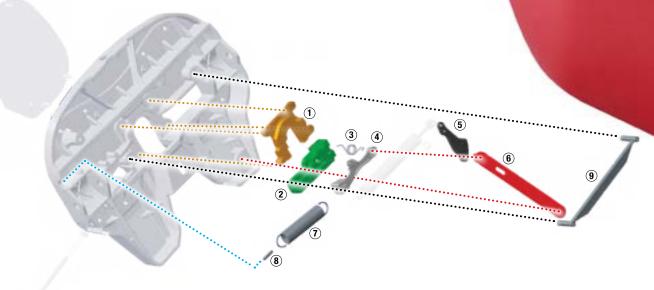

## **Lock Assembly Kit**

Part # ARMORLAK

Standard Repair Time:

### 1 Hour

Item	Description		Quantity
1	Stationary jaw		1
2	Locking jaw		1
3	Torsion spring	_ All parts are _	1
4	Trigger	pre-assembled	1
5	Secondary lock	in trigger	1
6	Operating handle	assembly kit.	1
7	Main spring		1
8	Spring tensioner		1
9	Cover plate		1

See video at fifthwheel.com/maintenance/ Choose "Lock Assembly Replacement"

Tools Required
Crowbar
Pliers
3/4" deep well socket
with 2" extension
9/16" socket
11/16" socket
1/4" allen wrench
Kingpin tool

Personal Protective Equipment
Safety glasses
Work gloves
Steel toe boots







Faster repairs • Greater uptime • Lowest total cost of ownership

# Knockout Rod Kit (ARMORKRK) **Spring Kit (ARMORSRK)**



**Tools Required** Crowbar Pliers

3/4" deep well socket

**Personal Protective** Equipment

with 2" extension

11/16" socket

Safety glasses

Work gloves Steel toe boots

Kingpin tool


## **Knockout Rod Kit** Part # ARMORKRK

Standard Repair Time:

### 30 Minutes

Item	Description	Quantity
1	Knockout rod	1
2	Knockout rod clip	1
3	Knockout rod spring	1
4	Knockout rod nut	1

See video at fifthwheel.com/maintenance/ Choose "Knockout Rod Replacement"

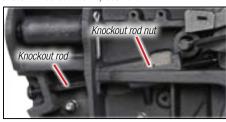

	Knockout Rod	Knockout Rod Nut
•		
	Knockout Rod Clip	Knockout Pod Spring

## Part # ARMORSRK

Standard Repair Time:

### 1 Hour


Item	Description	Quantity
5	Torsion spring	1
6	Spring tensioner	1
7	Main spring	1

See video at fifthwheel.com/maintenance/ Choose "Spring Kit Replacement"





## Trigger Assembly

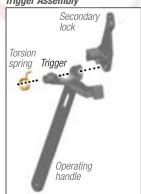

Torsion spring is behind trigger. and loops around operating handle/ secondary lock.


Tools Required
Crowbar
Pliers
3/4" deep well socket with 2" extension
9/16" socket
11/16" socket
1/4" allen wrench
Kingpin tool

Personal Protective Equipment	
Safety glasses	
Work gloves	
Steel toe boots	



Faster repairs • Greater uptime • Lowest total cost of ownership

# Air Cylinder Kit (AMORACK) Cover Plate Kit (ARMORCPK)

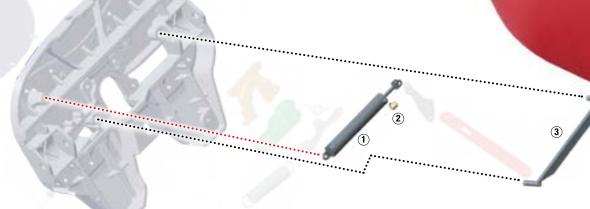

## Air Cylinder Kit

Part # ARMORACK

Standard Repair Time:

## 30 Minutes

Item	Description	Quantity
6	Air cylinder	1
7	3-way air valve	1

See video at fifthwheel.com/maintenance/ Choose "Air Cylinder Replacement"



### Air Cylinder



Tools Required
Crowbar
Pliers
3/4" deep well socket
with 2" extension
9/16" socket
11/16" socket
1/4" allen wrench
Kingpin tool

Personal Protective Equipment
Safety glasses
Work gloves
Steel toe boots

## **Cover Plate Kit**

Part # ARMORCPK

Standard Repair Time:

## 30 Minutes

		Quantity
11)	Cover plate	1
See vide	o at fifthwheel.com/maintenance/	
Choose	"Cover Plate Replacement"	
WWW.	THE RESERVE TO SHARE THE PARTY OF THE PARTY	BHILLSON, I'C.



	Personal Protective Equipment
4	Kingpin tool
и	1/4" allen wrench
흑	11/16" socket
	9/16" socket
4	with 2" extension
NEC 1	3/4" deep well socket

**Tools Required** Crowbar **Pliers** 



Personal Protective
Equipment
Safety glasses
Work gloves
Steel toe boots
# <del>'</del>





Faster repairs • Greater uptime • Lowest total cost of ownership

# Pin and Bushing Kit (ARMORPBK)



## **Pin and Bushing Kit**

Part # ARMORPBK

Standard Repair Time:

## 30 Minutes

Pin and bushings not shown in illustration.

See video at fifthwheel.com/maintenance/ Choose "Pin and Bushing Replacement"



Tools Required		
Crowbar		
Pliers		
9/16" socket		
Kingpin tool		


Personal Protective Equipment		
Safety glasses		
Work gloves		
Steel toe boots		





Faster repairs • Greater uptime • Lowest total cost of ownership

# Wear Plate Kit (ARMORWPK)

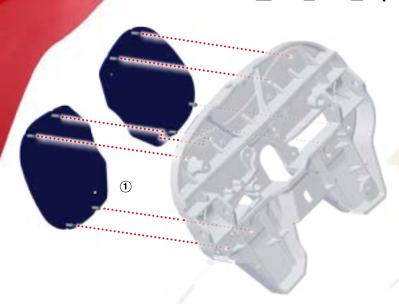

## **Wear Plate Kit**

Part # **ARMORWPK** 

Standard Repair Time:

## 15 Minutes

 
Item	Description	Quantity
1	Wear plate	2

See video at fifthwheel.com/maintenance/ Choose "Wear Plate Replacement"



To	ools Required
C	rowbar
PI	liers
	/4" deep well socket
W	ith 2" extension
1-	1/16" socket
Ki	ingpin tool

Personal Protective		
Equipment		
Safety glasses		
Work gloves		
Steel toe boots		



Once a wear plate is removed you have easy access to the locking jaw, knockout rod, and air cylinder connection.





Faster repairs • Greater uptime • Lowest total cost of ownership

## **Grease Zerk Locations**




1/8" NPT zerks can be purchased from industrial supplier. See zerk locations for proper fifth wheel lubrication.





Faster repairs • Greater uptime • Lowest total cost of ownership

## **Part Identification – Bottom View**

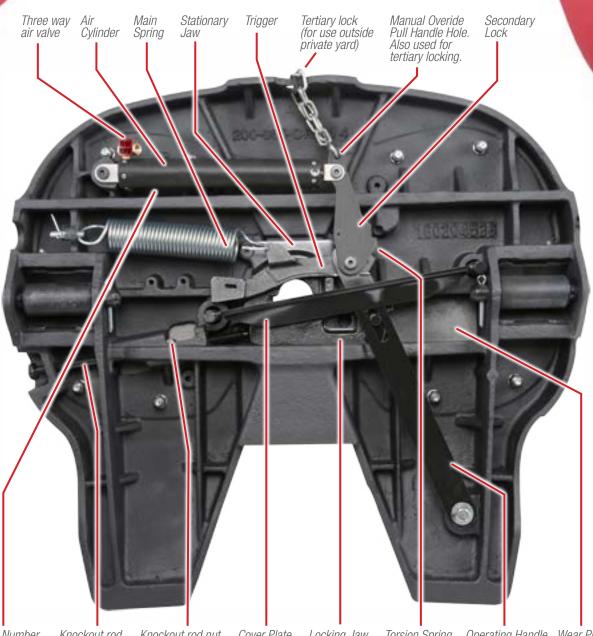

Serial Number Cover Plate Locking Jaw Torsion Spring Operating Handle Wear Plate Knockout rod Knockout rod nut (Behind air cylinder)



09140028

manufactured in September, 2014





Faster repairs • Greater uptime • Lowest total cost of ownership


# **Part Identification – Top View**



Wear Plates (removable for easy maintenance)



Air cylinder bolt access (under wear plate)

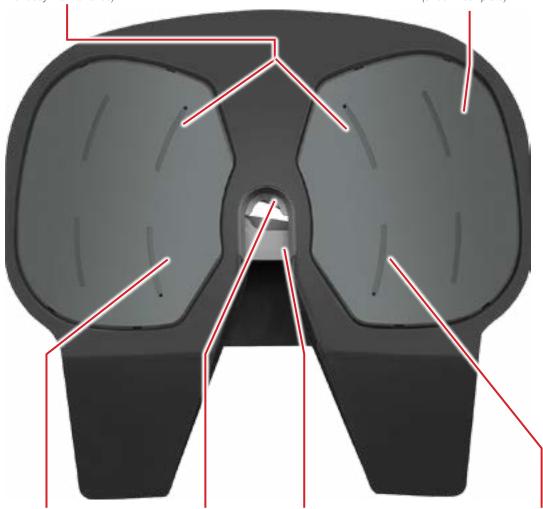

Locking jaw access (under wear plate). Locking jaw slides in for easy maintenance.



Stationary

Locking Jaw

Knockout rod access (under wear plate). Slot for easy knockout rod maintenance.



