


This guide explains the nomenclature for Fontaine Fifth Wheel complete assembly part numbers.


See example part number at right:

SLNTLW0675012

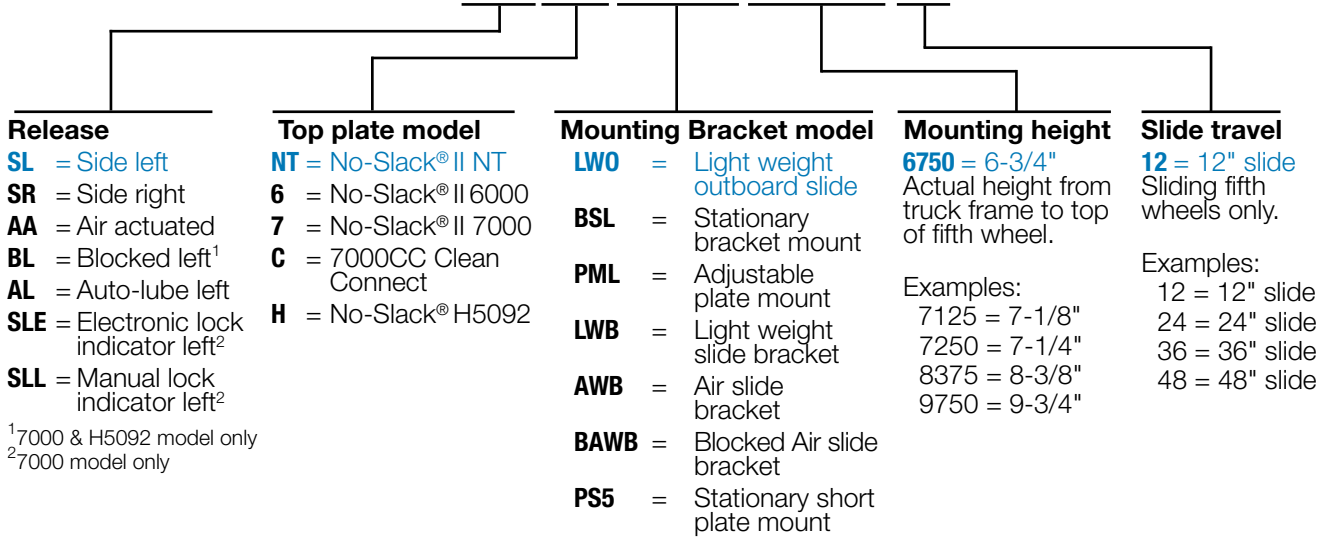

Measurements & Serial Number Location

How do I measure a fifth wheel?

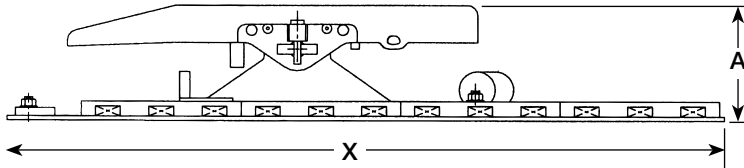

The installed height of all Fontaine models is measured from the top of the truck frame to the top of the fifth wheel. For standard models dimension "A" is a part of the model number. For example, if dimension "A" in this diagram is 7.75 inches, it would appear in the model number as 7750 (Example: SL7AWB**7750**24).

How do I find the serial number

Serial number engraved directly into the right side of fifth wheel skirt. Note: position 5 and 6 of the serial number indicates the year built. Serial number is always 9 digits.



No-Slack® II right side view serial number location