

TECHNICAL BULLETIN


TB-041 • March 2010

6000/7000/7000CC Series No-Slack® Drop Handle

Important: This handle cannot be used with air actuated fifth wheels.

This bulletin covers the proper inspection of the No-Slack drop handle. This inspection must be completed after coupling to ensure the fifth wheel is closed. Refer to the illustrations below for details.

Fifth wheel closed properly

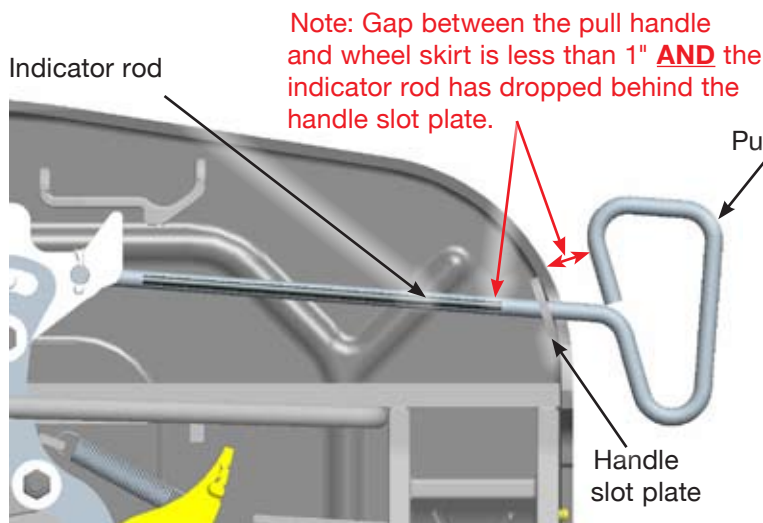


Bottom view

Side view




Front view

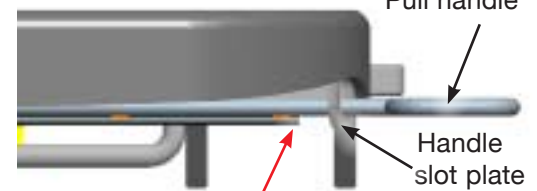

Note: Indicator rod has dropped behind the handle slot plate

Fifth wheel not closed properly

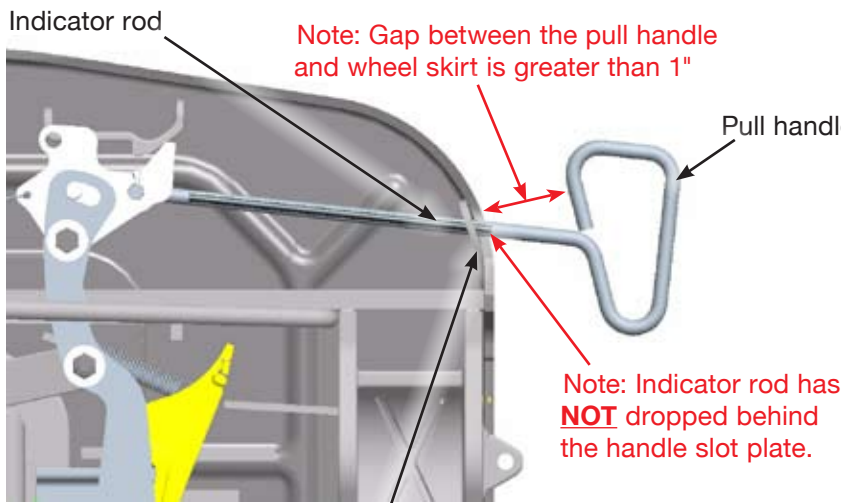


Bottom view

Side view



Front view

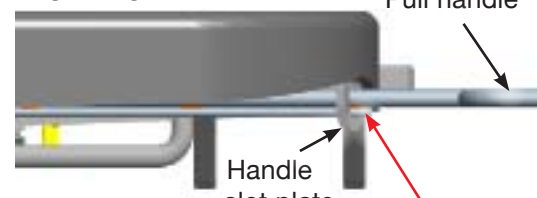

Note: Indicator rod has **NOT** dropped behind the handle slot plate