

Proper Ultra LT Top Plate Disposal

ISO/TS16949 REGISTERED
TB-061 • September 2015

Do not reuse Ultra LT top plate or sell any part of the fifth wheel

After removal from the truck, the Ultra LT fifth wheel must be scrapped per these instructions



To view video of replacement and disposal process scan or go to www.fifthwheel.com/recall



1) Cut outside saddle bearing ear with cutting torch.



2) After saddle bearing ear removal, dispose of fifth wheel.

