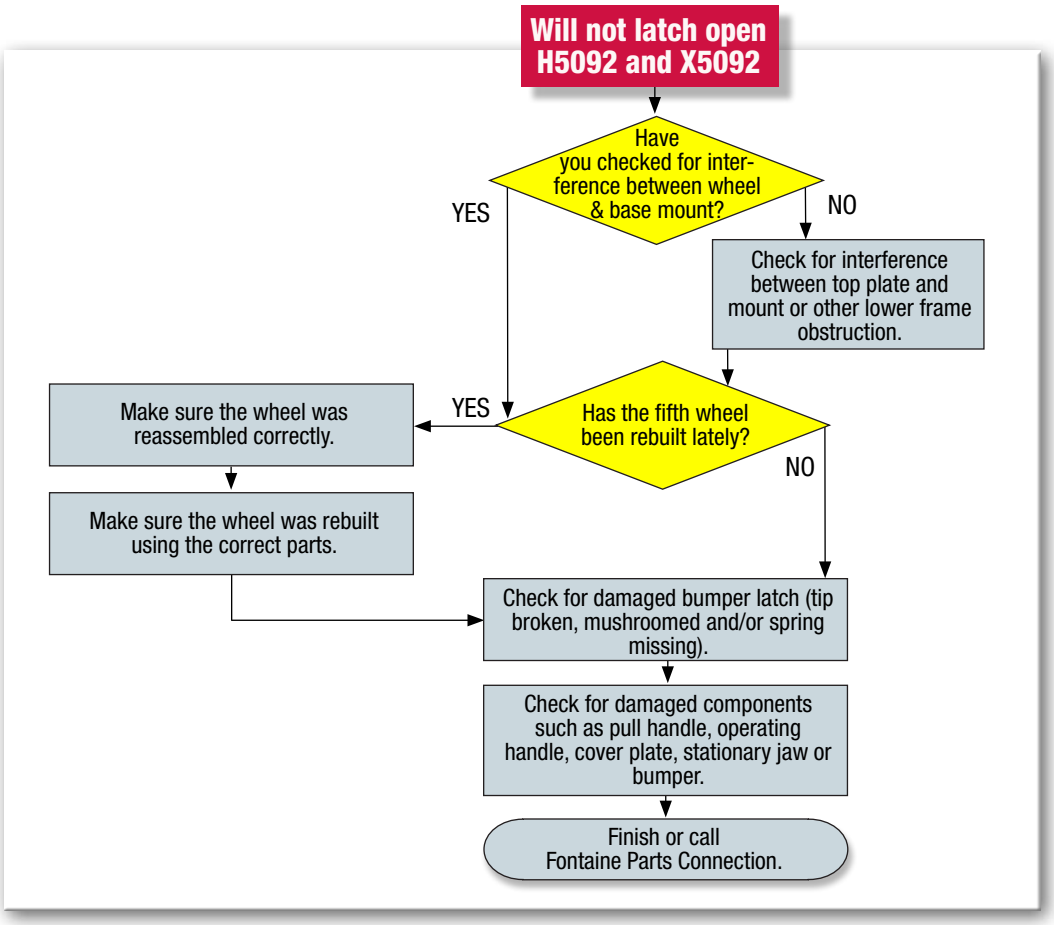
Will not latch open H5092 and X5092
Have you checked for interference between wheel & base mount?
YES
NO
Check for interference between top plate and mount or other lower frame obstruction.
Has the fifth wheel been rebuilt lately?
YES
NO
Make sure the wheel was reassembled correctly.
Make sure the wheel was rebuilt using the correct parts.
Check for damaged bumper latch (tip broken, mushroomed and/or spring missing).
Check for damaged components such as pull handle, operating handle, cover plate, stationary jaw or bumper.
Finish or call Fontaine Parts Connection.