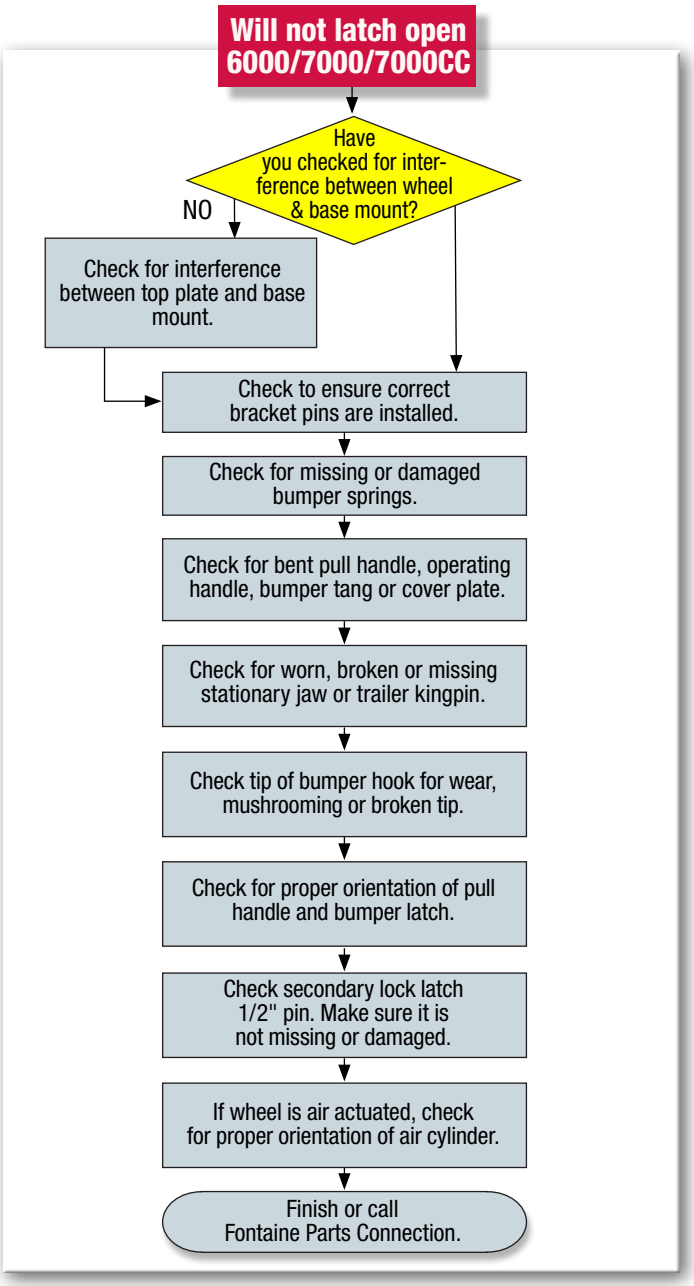
Will not latch open
6000/7000/7000CC
Have you checked for interference between wheel & base mount?
NO
Check for interference between top plate and base mount.
Check to ensure correct bracket pins are installed.
Check for missing or damaged bumper springs.
Check for bent pull handle, operating handle, bumper tang or cover plate.
Check for worn, broken or missing stationary jaw or trailer kingpin.
Check tip of bumper hook for wear, mushrooming or broken tip.
Check for proper orientation of pull handle and bumper latch.
Check secondary lock latch 1/2" pin. Make sure it is not missing or damaged.
If wheel is air actuated, check for proper orientation of air cylinder.
Finish or call Fontaine Parts Connection.