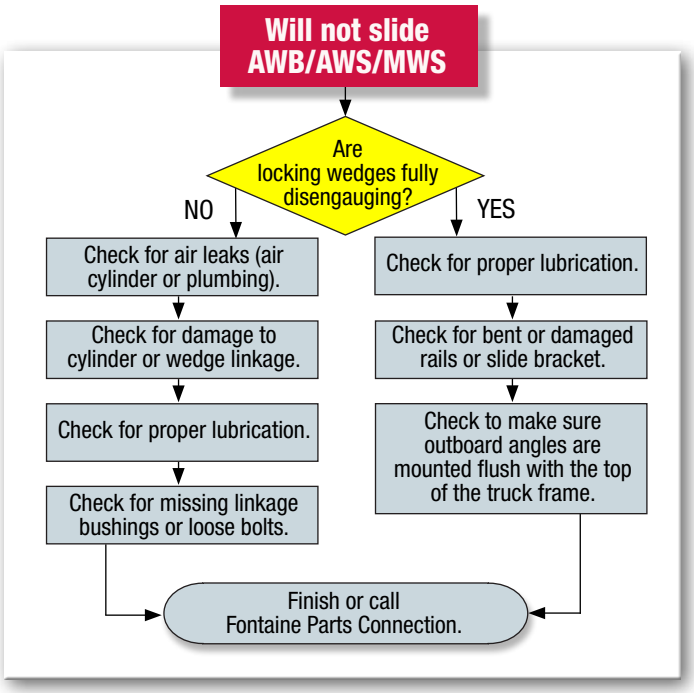
Will not slide AWB/AWS/MWS
Are locking wedges fully disengauging?
NO
YES
Check for air leaks (air cylinder or plumbing).
Check for damage to cylinder or wedge linkage.
Check for proper lubrication.
Check for missing linkage bushings or loose bolts.
Check for proper lubrication.
Check for bent or damaged rails or slide bracket.
Check to make sure outboard angles are mounted flush with the top of the truck frame.
Finish or call Fontaine Parts Connection.