

TECHNICAL BULLETIN

TB-005 • July 2005

Important Notice

Jaw & Wedge Pin Height are Not the Same For Fontaine No-Slack® II Fifth Wheels And 5092 Series Fifth Wheels

When changing the jaw and wedge of a Fontaine fifth wheel, please make sure that you are using the correct rebuild kit. The No-Slack® 5092 Series and the No-Slack® II 6000/7000 Series kits are not the same and the parts included in the kits are not interchangeable.

To distinguish between the No-Slack® 5092 and No-Slack® II 6000/7000 models, a key figure is embossed into the jaw and wedge body.

Please make sure you are using the correct part by matching wheel model and key figure embossed into the body of the part.

Wheel Model	Key Figure Embossed on Body
--------------------	------------------------------------

No-Slack® II 6000/7000	6000/7000 LH or RH
------------------------	--------------------


No-Slack® 5092	5092 LH or RH
----------------	---------------

(LH & RH denotes left hand or right hand release)


Please refer to the drawing on the back of this bulletin.

Comparison of Pin Height of No-Slack® 5092 Series and No-Slack® II 6000/7000 Fifth Wheels


5092 Wedge

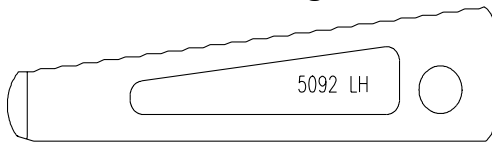

6000 Wedge

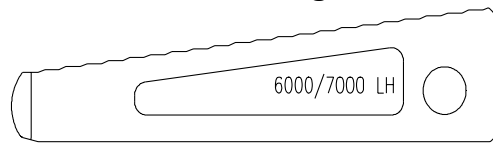

5092 Jaw

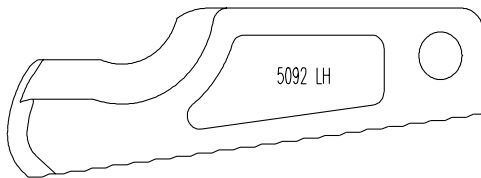

6000 Jaw

